Sizzlers®
World's coolest electric cars!

Hot Wheels® MATTEL®

Power Pit™ charger

With lights and sounds alert!

Keep these instructions for future reference as they contain important information.

CONTENTS

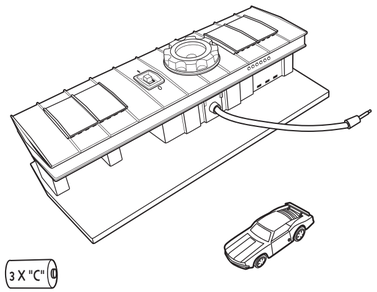

Requires 3 "C" (LR14) alkaline batteries (not included).

BATTERY INSTALLATION

Open the battery cover with a Phillips head screwdriver (not included). Insert 3 size "C" alkaline batteries in the orientation shown. Replace the battery cover and tighten screw. For best performance use only alkaline batteries. Change the batteries if the product does not function properly or if the sounds are garbled or play slowly.

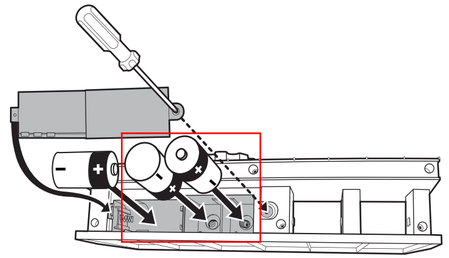

TO PLAY

1. Push power nozzle all the way into intake pipe of car. Never wiggle power nozzle when it is in the car.

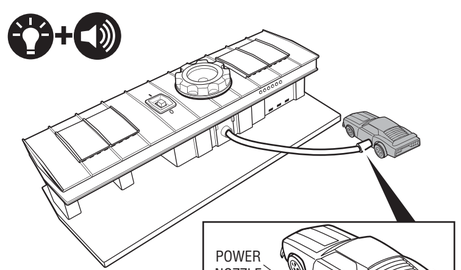

NOTE: Switch on bottom of the car can be set to ON or OFF.

2. **CHARGE YOUR CAR:** Move the switch on the top of your charger to ON (I). Twist the knob on the top of the charger. The lights on the charger will countdown and when your car is fully charged all the lights will flash and you will hear start up sounds. It takes about 90 seconds for a full charge.

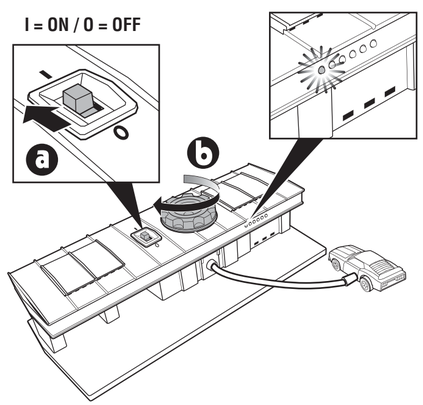

3. Your Sizzlers® car is charged and ready to go!

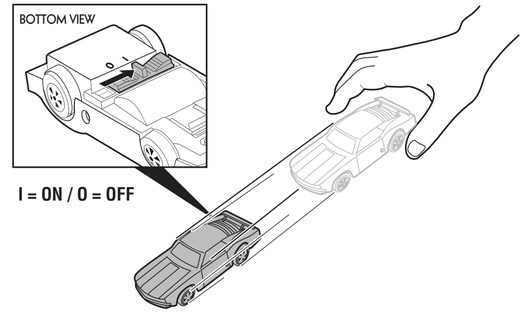

SIZZLERS® - power-charged electric car.

FOR BEST RESULTS, LET SIZZLERS® CAR GO FREE-WHEELIN' ON SMOOTH, HARD FLOORS!

TUNE-UP TIPS FOR WHEELS: DO NOT OIL WHEELS AND AXLE. They are permanently lubricated with special racing oil. Ordinary oil will harm them.

TO OPERATE SIZZLERS® CAR: You can also use a GOOSE PUMP™ or JUICE MACHINE™ recharger. The power cell recharges for the life of the car!
IMPORTANT - To stop the motor always set the switch to OFF. Never hold the rear wheels to stop the motor.

TO SAVE POWER: Turn switch on the bottom of your car to OFF after you are finished playing.

CAUTION: Never give your SIZZLERS® car more than one full 90 second charge at a time.

BATTERY SAFETY INFORMATION
In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the product before being charged (if designed to be removable).
- Rechargeable batteries are only to be charged under adult supervision (if designed to be removable).
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the product.
- The supply terminals are not to be short-circuited.
- Dispose of battery(ies) safely.
- Do not dispose of this product in a fire. The batteries inside may explode or leak.

Protect the environment by not disposing of this product with household waste [2002/96/EC]. Check your local authority for recycling advice and facilities.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

© 2007 Mattel, Inc. 333 Continental Blvd., El Segundo, CA 90245 U.S.A. All Rights Reserved. Consumer Relations 1 (800) 524-8697 service.mattel.com • Mattel Canada Inc., Mississauga, Ontario L5R 3W2. You may call us free at 1-800-524-8697. • Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628500303 • Mattel Australia Pty Ltd., Richmond, Victoria. 3121. Consumer Advisory Service - 1300 135 312. • Mattel East Asia Ltd., Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. • Diimport & Diedarkan Oleh: Mattel SEA Ptd Ltd.(993532-P) Lot 13.5, Menara Lien Hoe, Persiaran Tropicana Golf Country Resort, 47410 PJ. Tel:03-78803817, Fax:03-78803867.

L8936-0920
L8957-0920
Asst K8725

Ni-Cd **CONTAINS NICKEL CADMIUM BATTERY. BATTERY MUST BE RECYCLED OR DISPOSED OF PROPERLY.**

Hot Wheels COLLECTORS .com™

5+ MATTEL®

INSTRUCTION SHEET SPECIFICATIONS

Toy:	Power Pit™ Charger
Toy No.:	K8725
Part No.:	0920
Trim Size:	8.5" W x 11" H
Folded Size:	
Type of Fold:	
# colors:	One
Colors:	Black
Paper Stock:	COMIC
Paper Weight:	70 LB
EDM No.:	002